




**FIG. 1A**

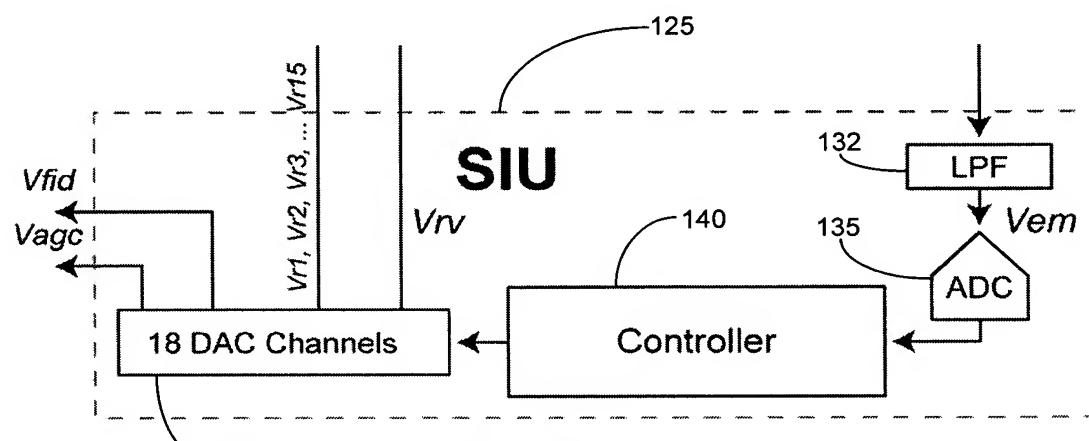






**FIG. 1B**

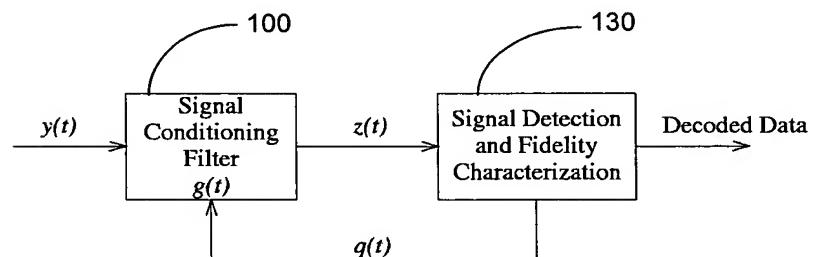


**FIG. 2**

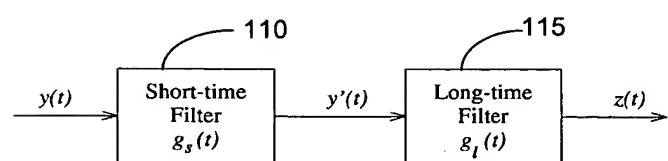


**FIG. 3**

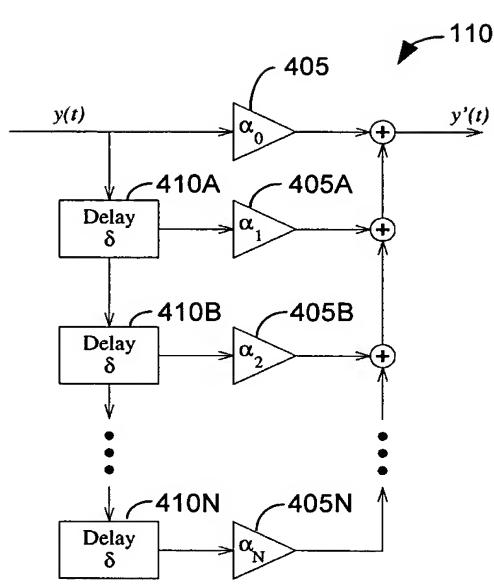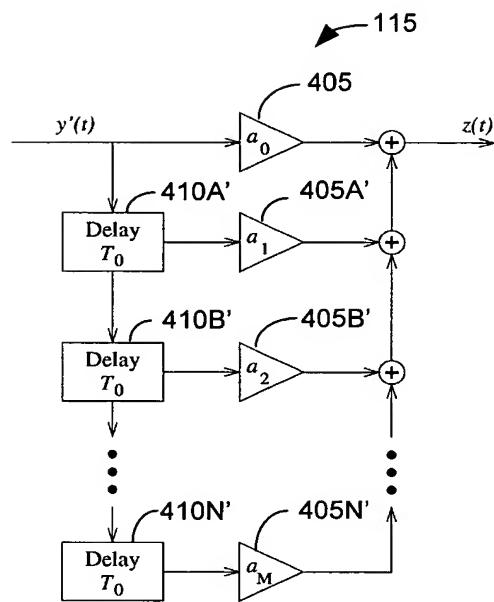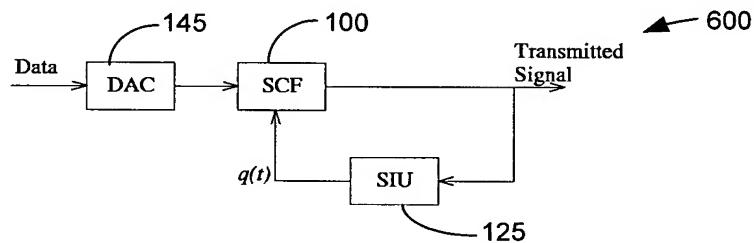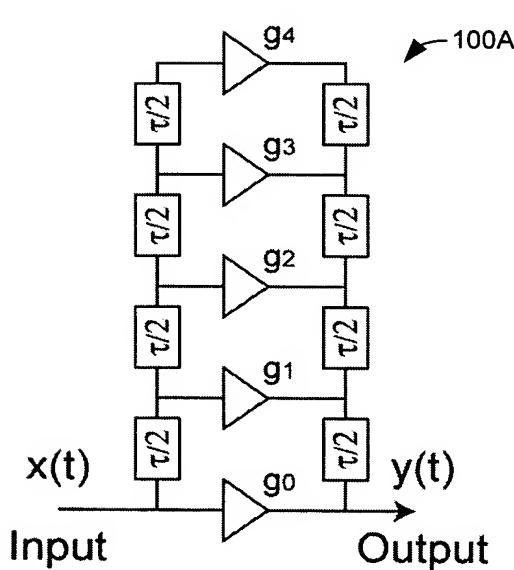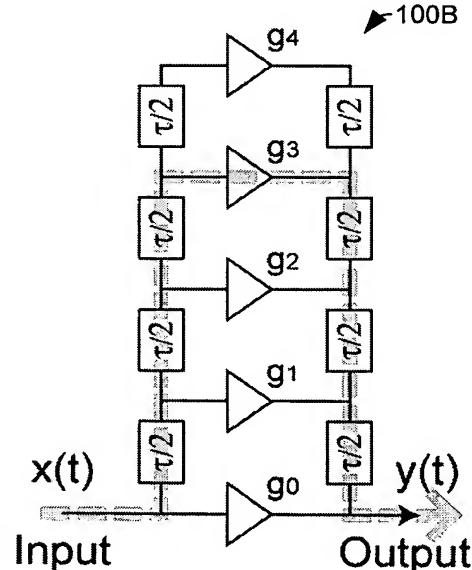
**FIG. 4****FIG. 5****FIG. 6****FIG. 7****FIG. 8**

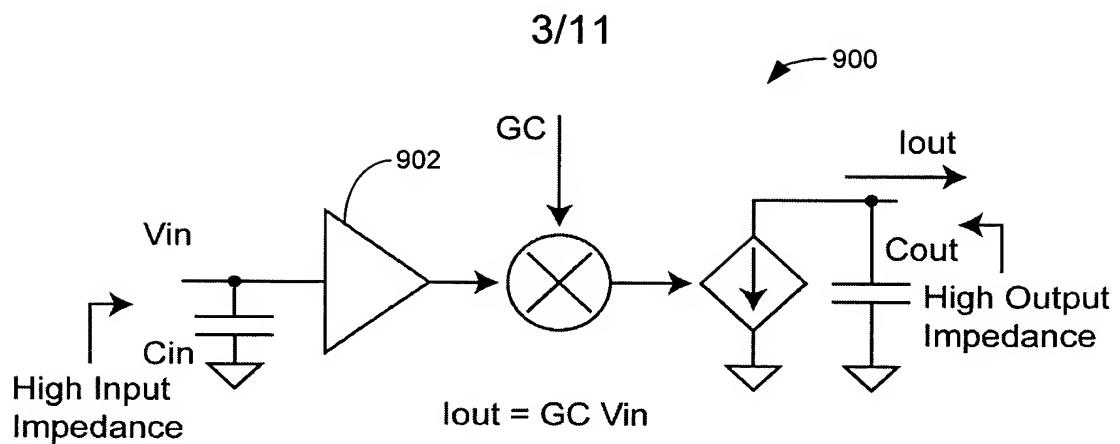

**FIG. 9**

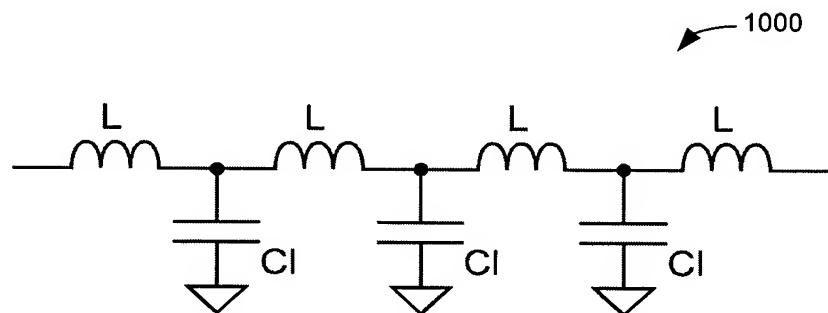

**FIG. 10**

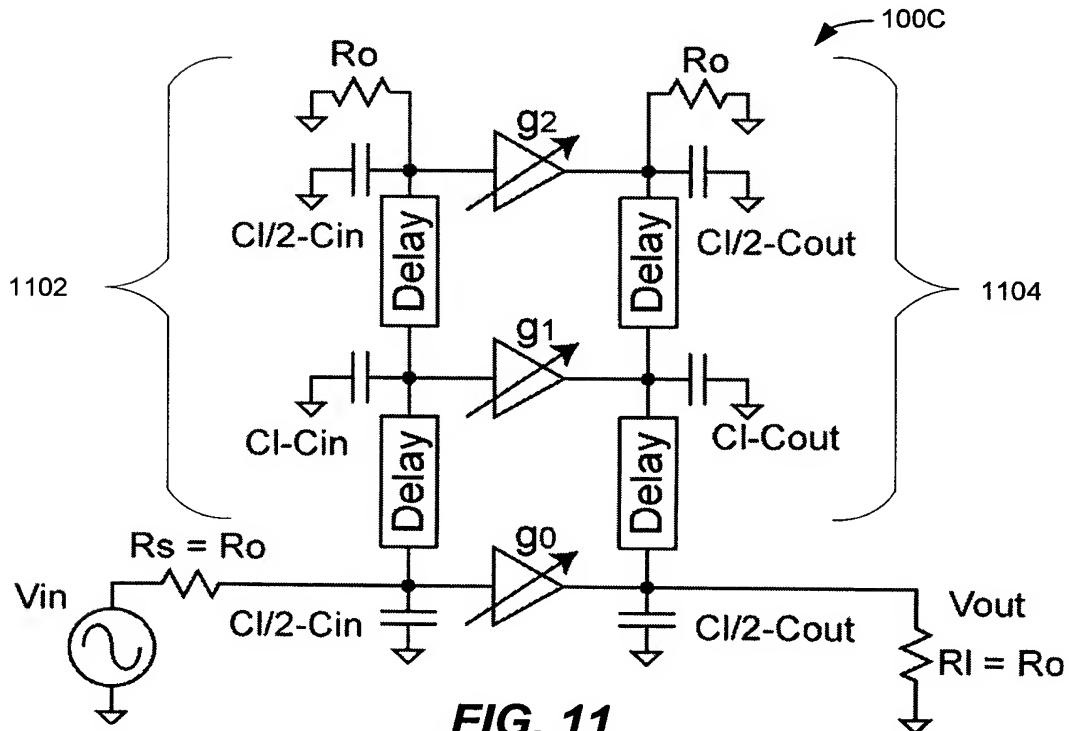

**FIG. 11**


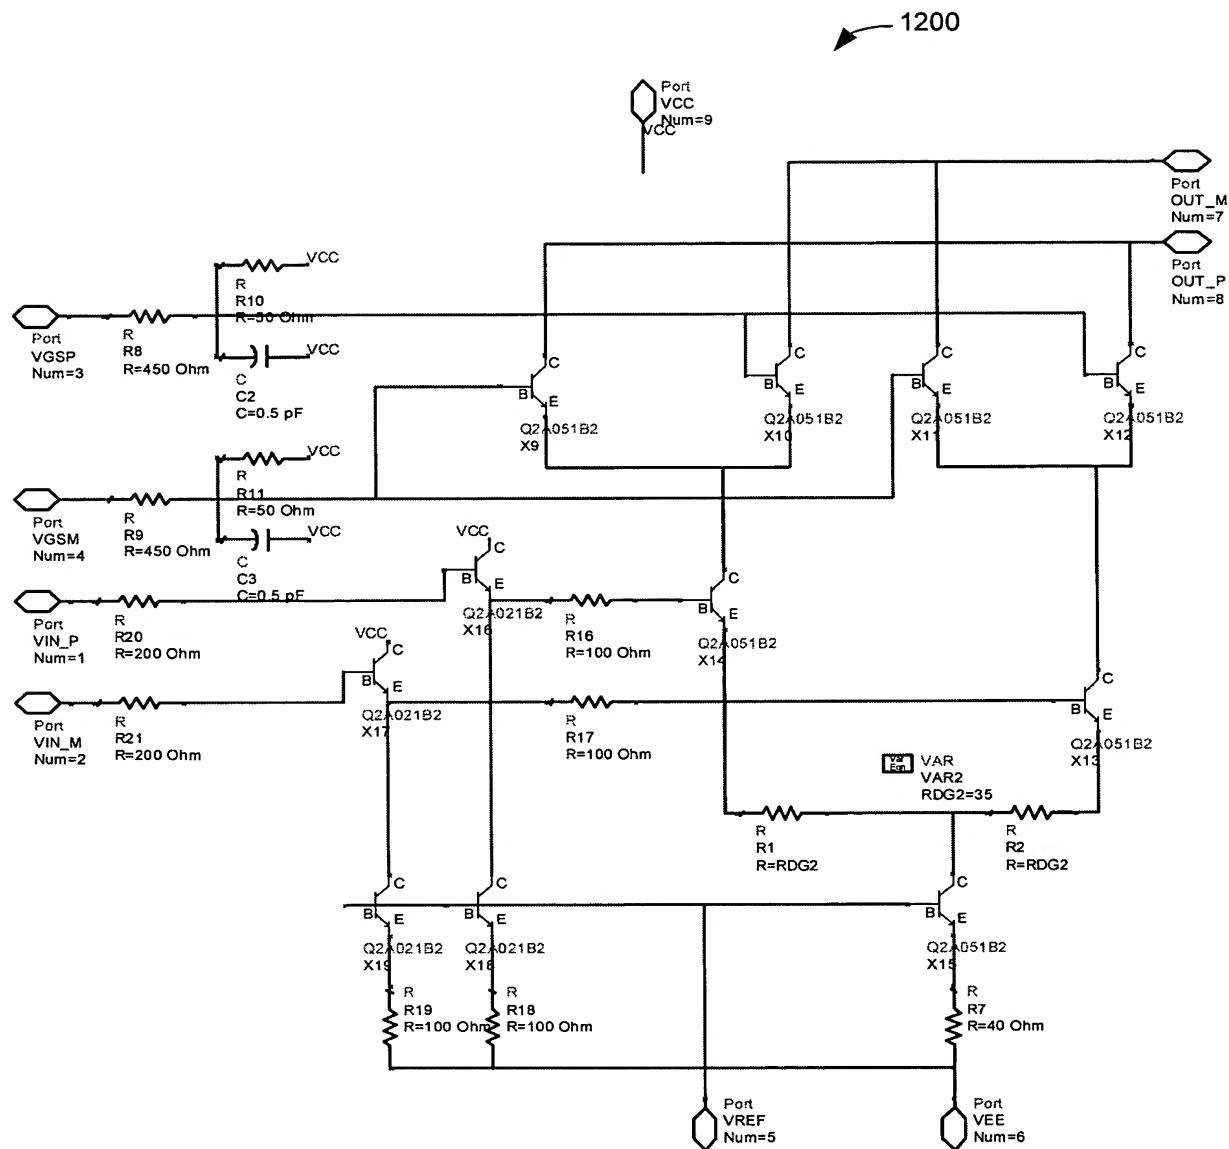



FIG. 12

5/11

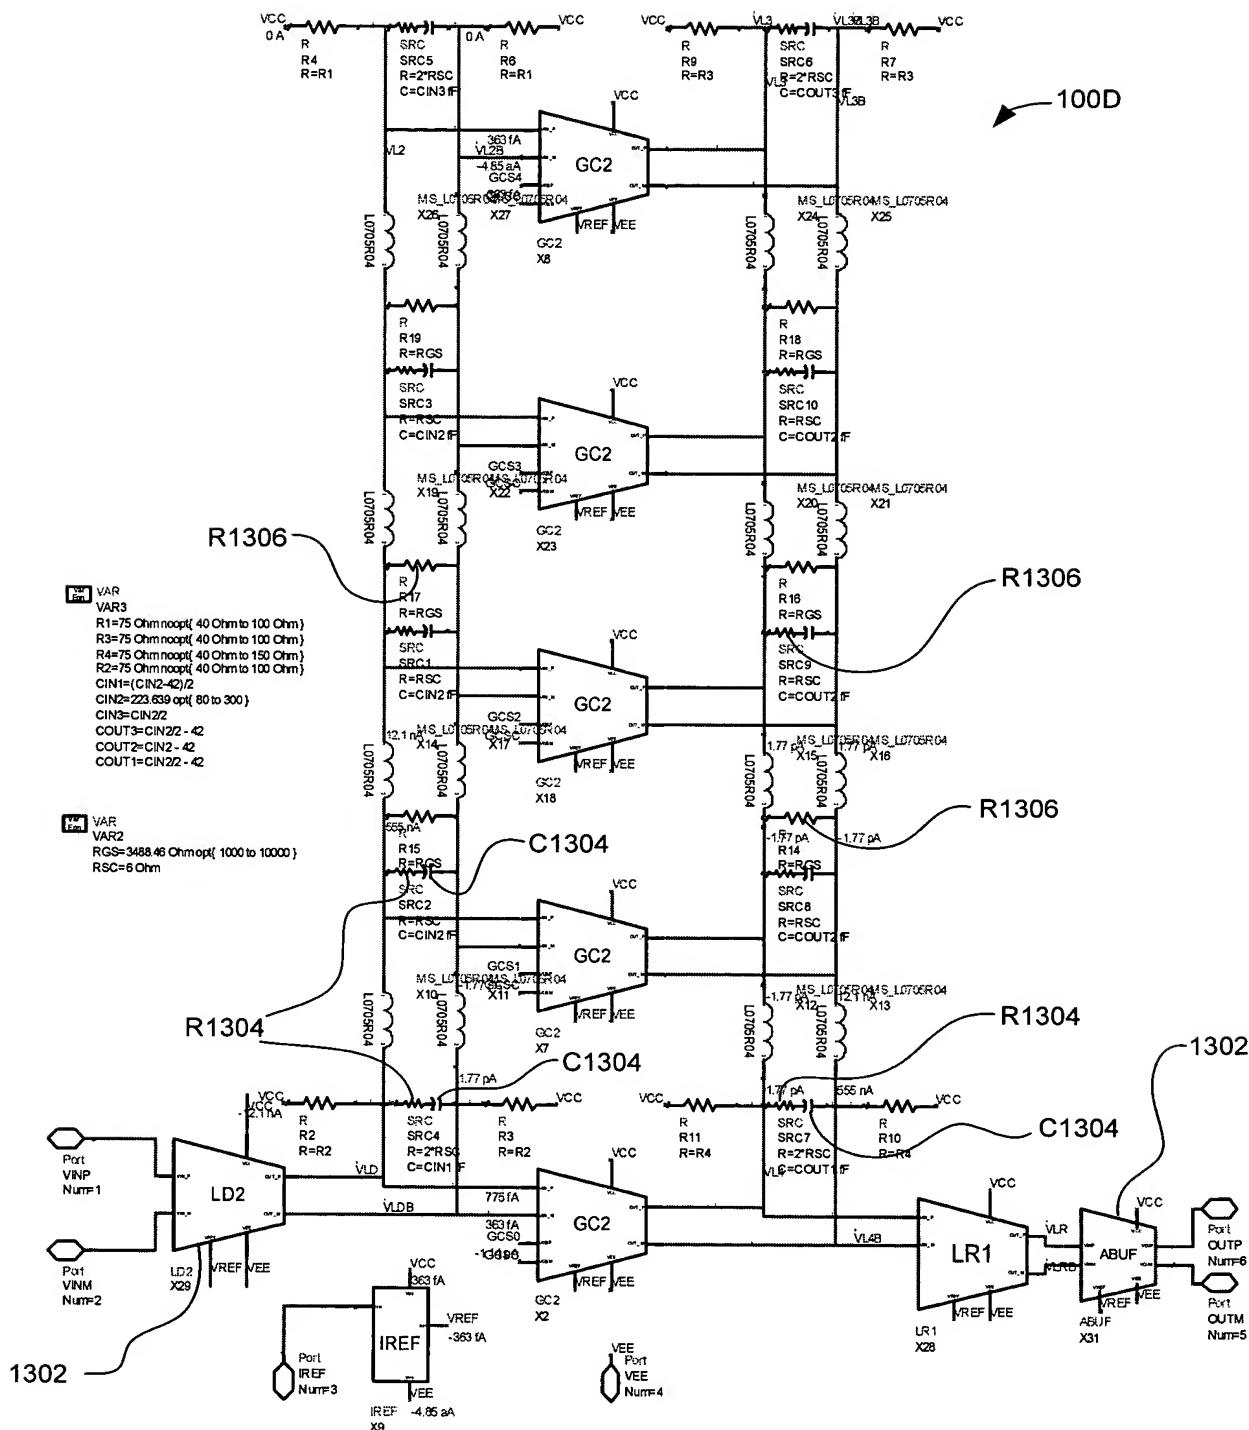

**FIG. 13**


6/11

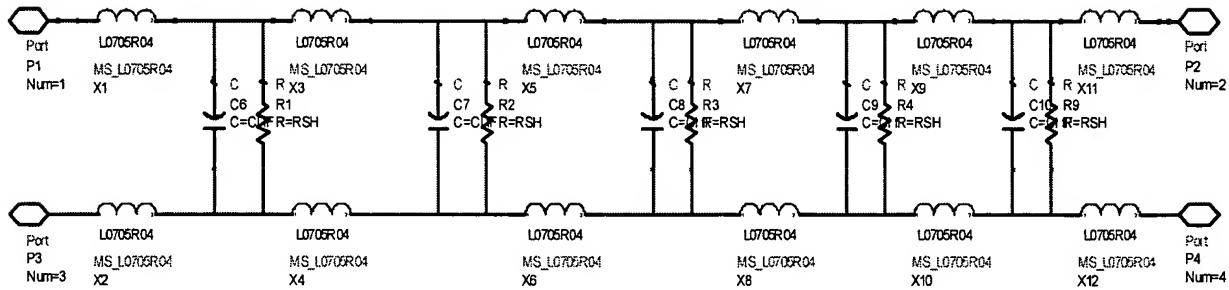


```
VAR  
  global VAR2  
  CI=144 opt{ 100 to 200 }  
  RSH=4800 Ohm noopt{ 100 Ohm to 1 MOhm }
```

**FIG. 14**


100E

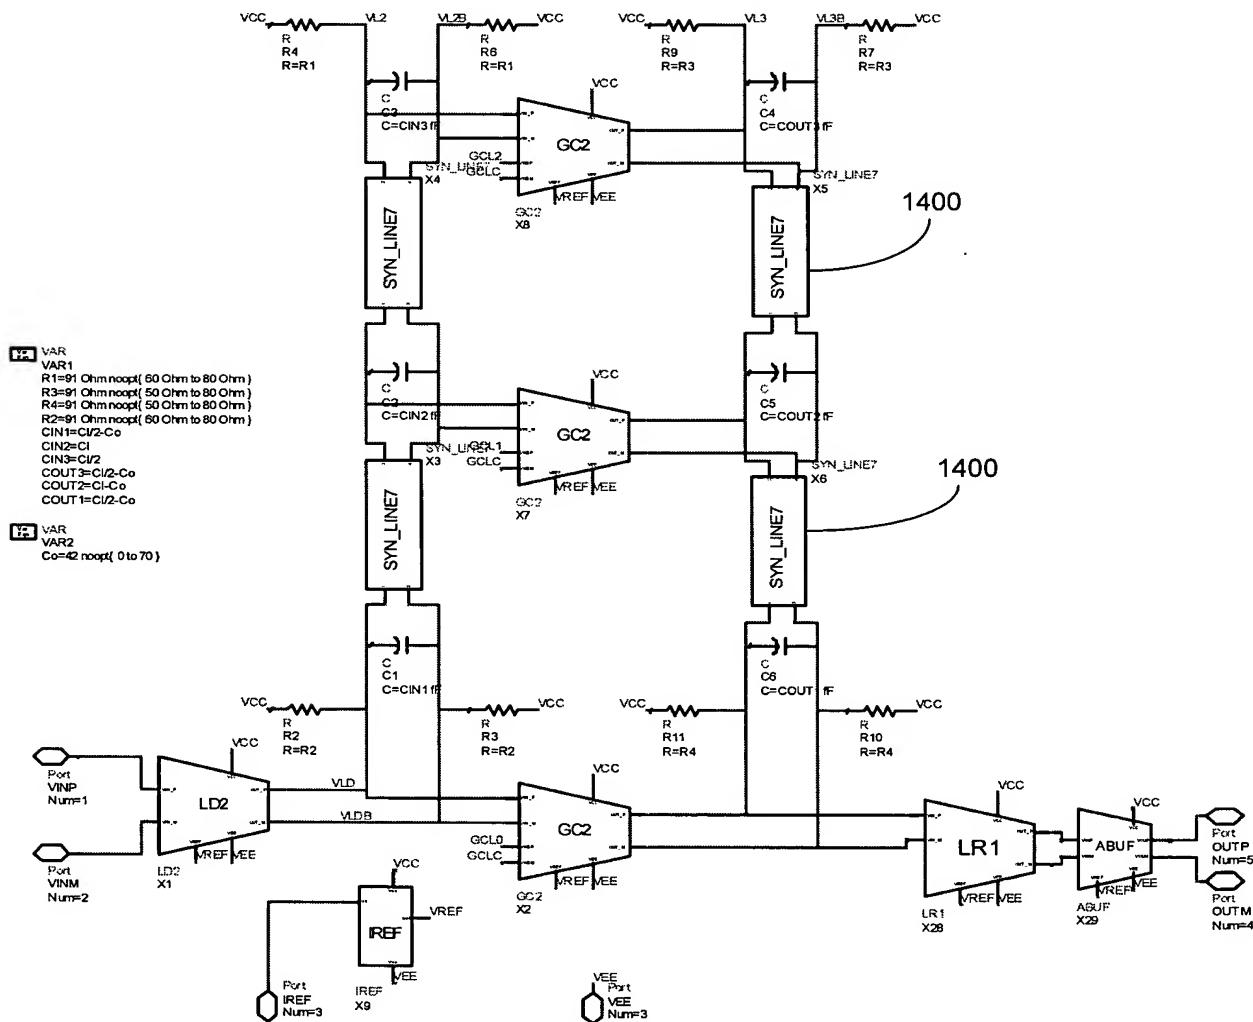


**FIG. 15**

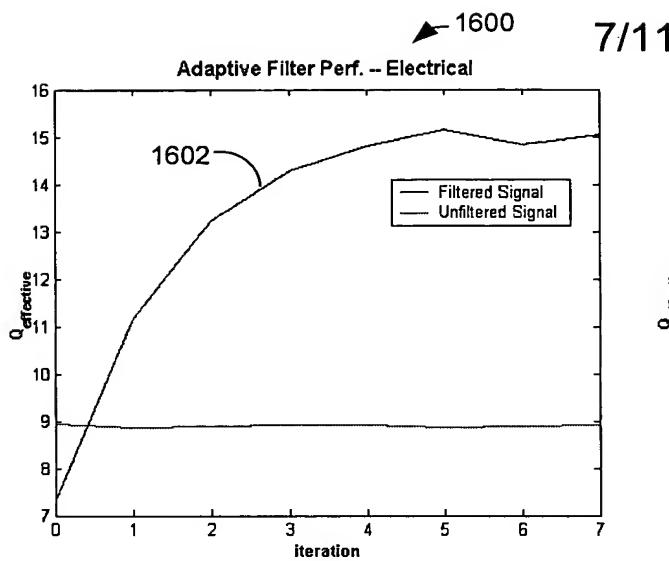


**FIG. 16**

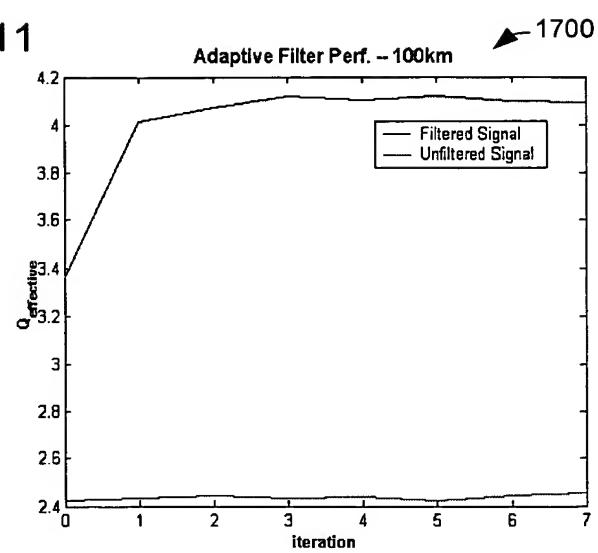


**FIG. 17**

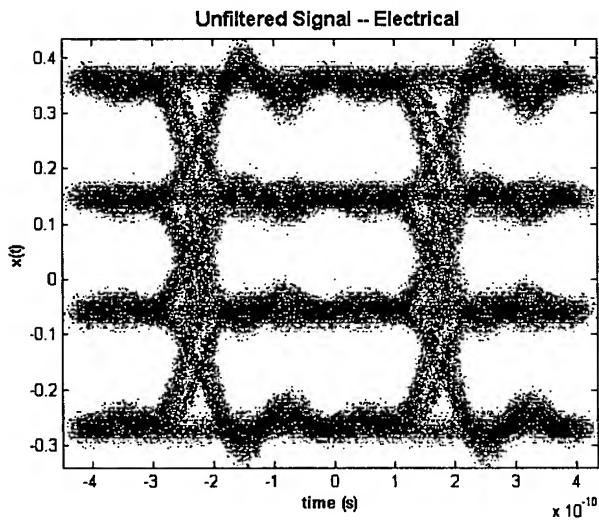


**FIG. 18**

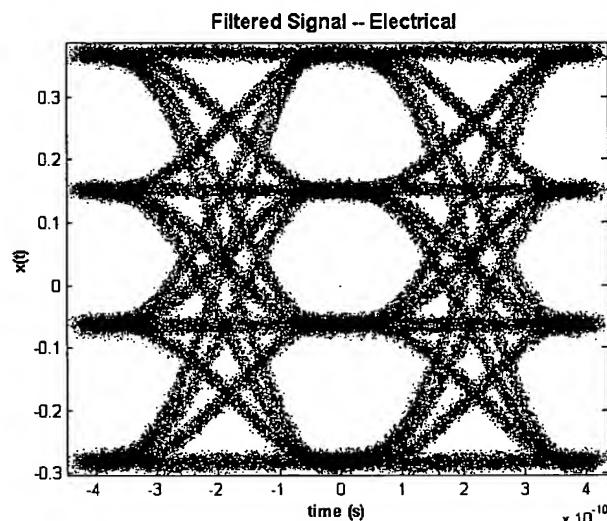




**FIG. 19**

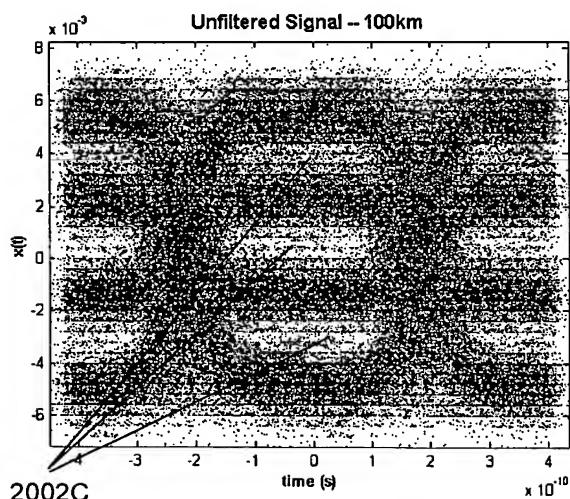


**FIG. 20**

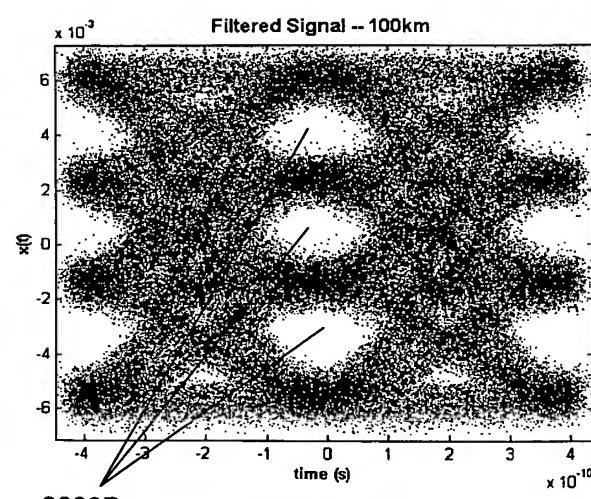


**FIG. 21**

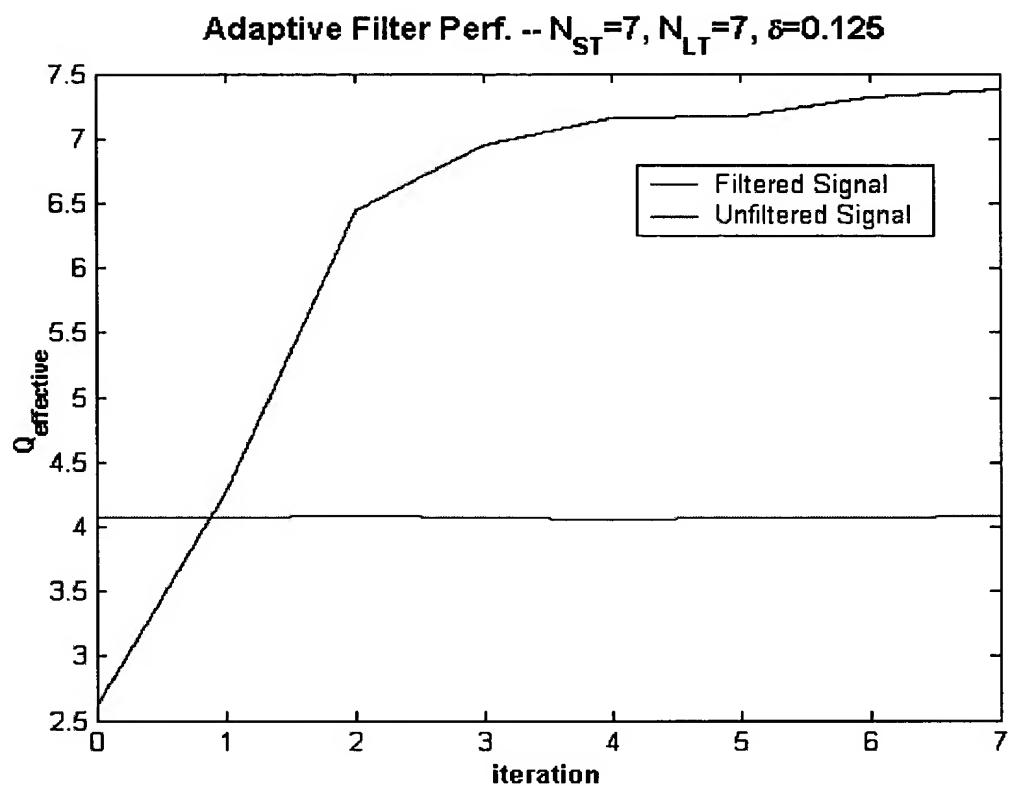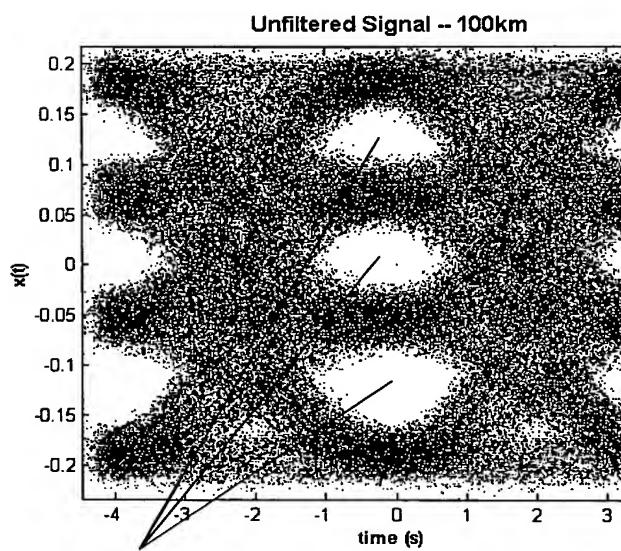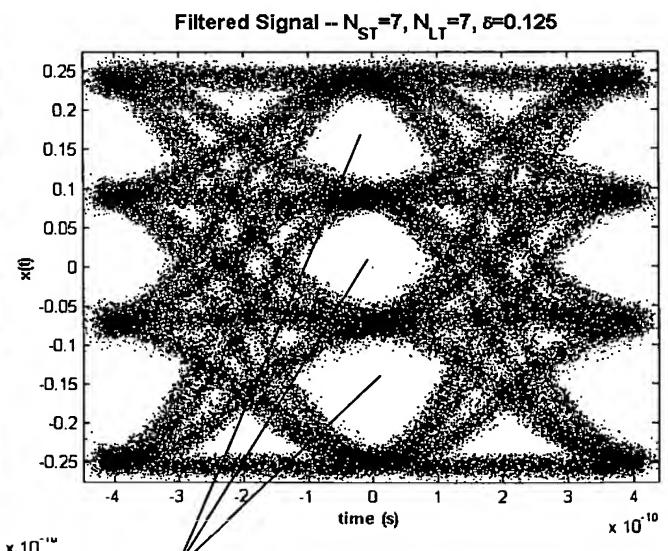**FIG. 22****FIG. 23****FIG. 24**

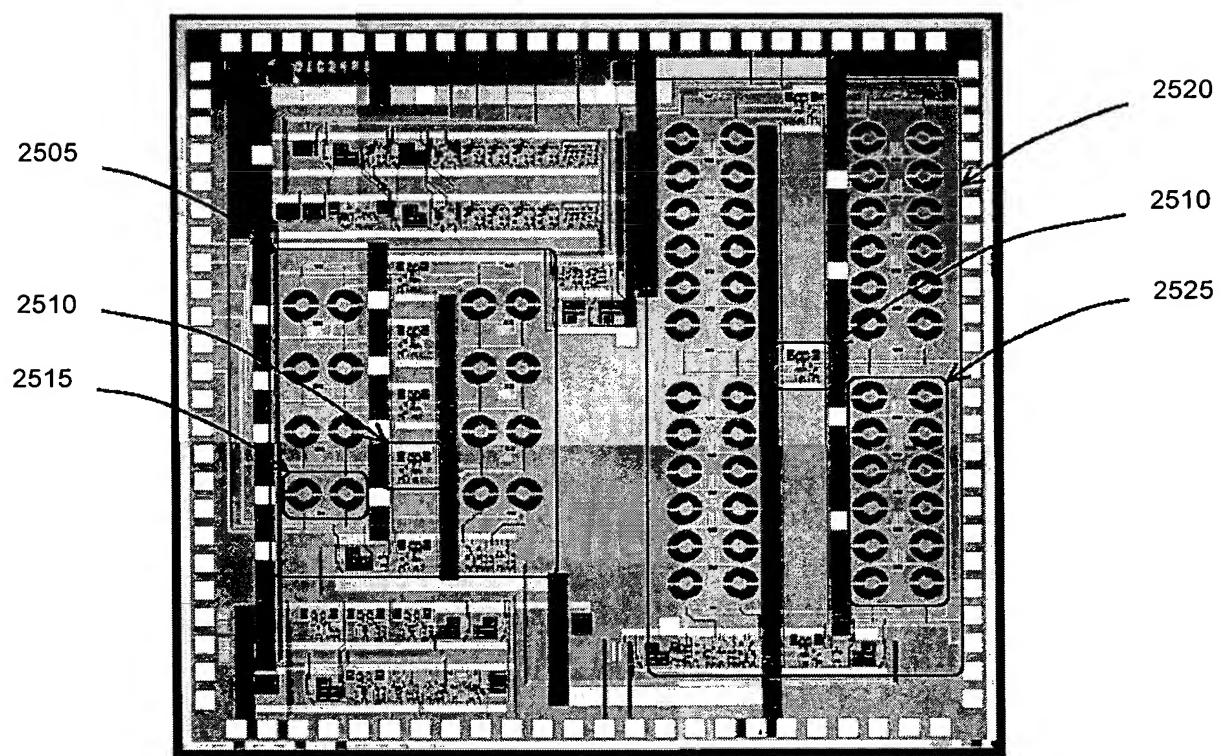


**FIG. 25**

10/11

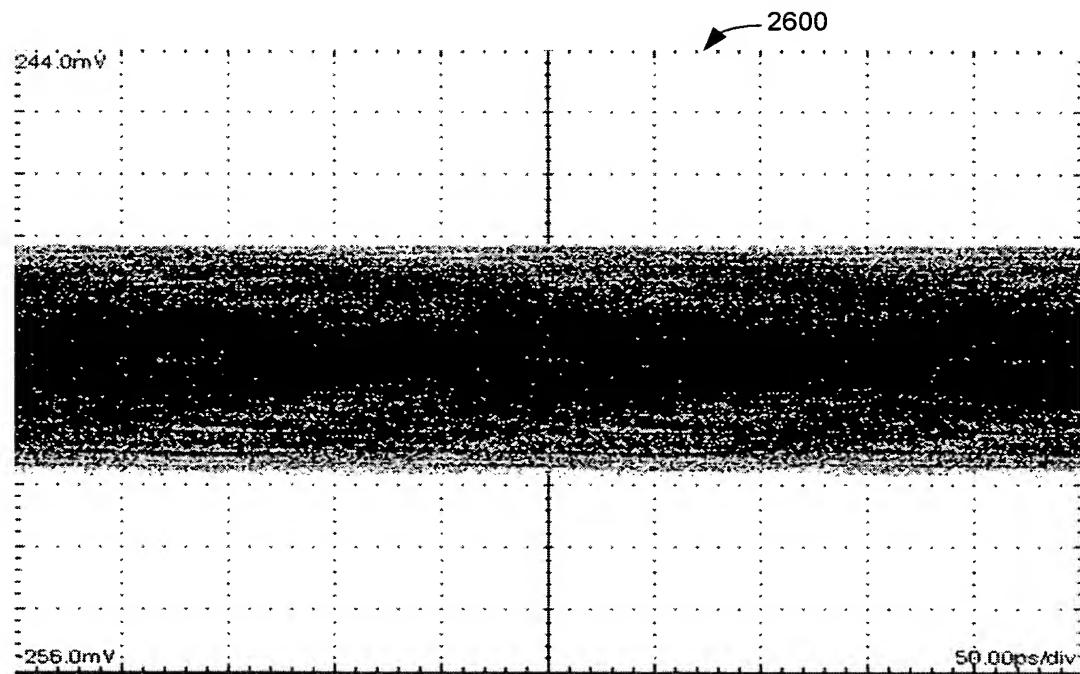


**FIG. 26**

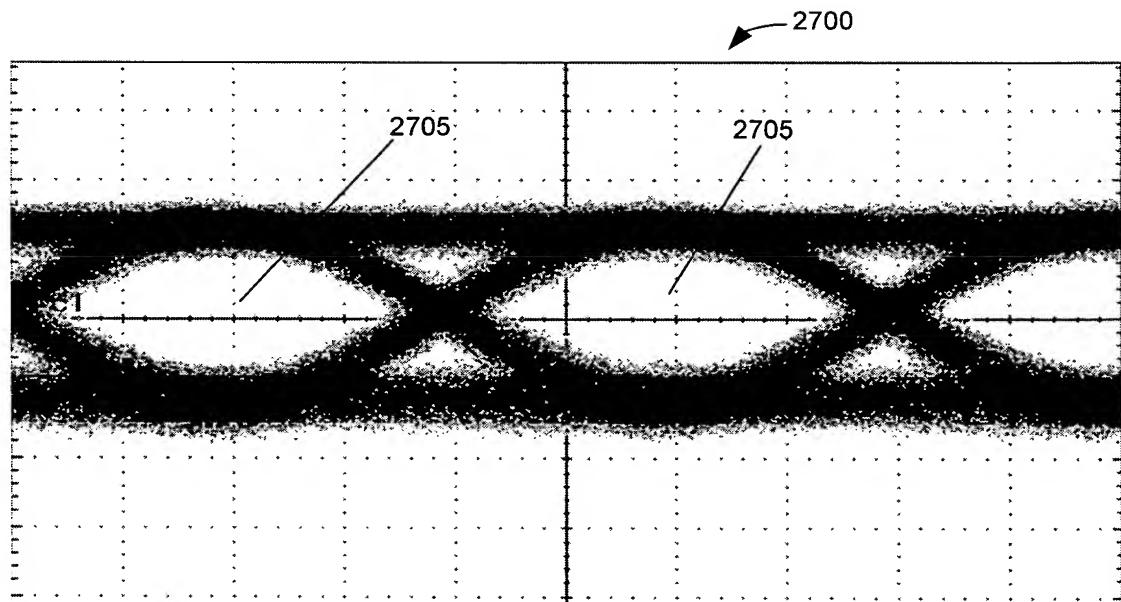


**FIG. 27**

11/11

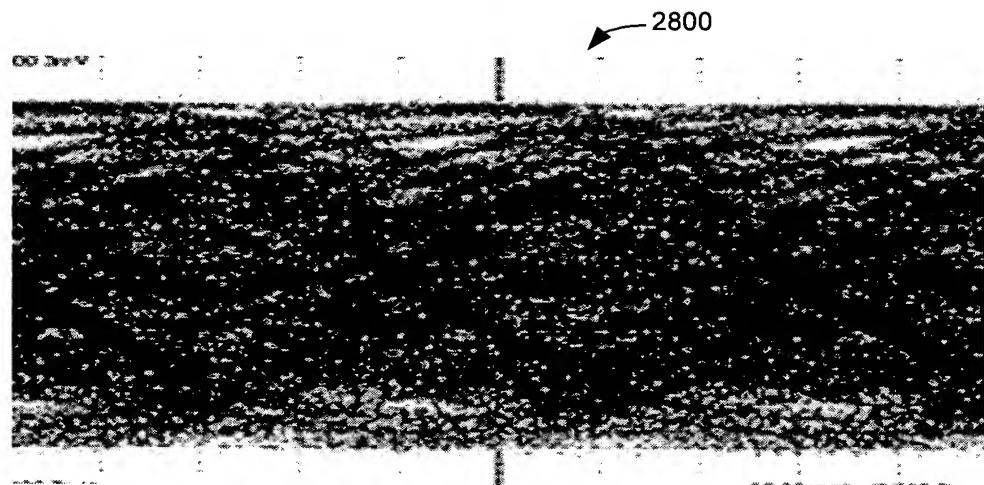

**FIG. 28**

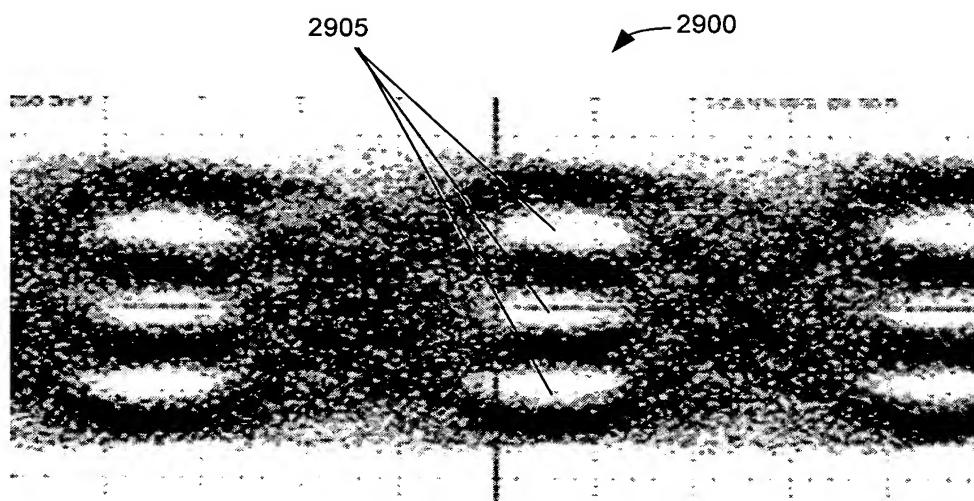

**FIG. 29**